




COOKTOP PARTS

For Models: GR673LXSQ2, GR673LXSS2, GR673LXSB2

(White) (Stainless Steel) (Black)

30" ELECTRIC CERAN
FREESTANDING RANGE
SELF CLEAN CONVECTION OVEN

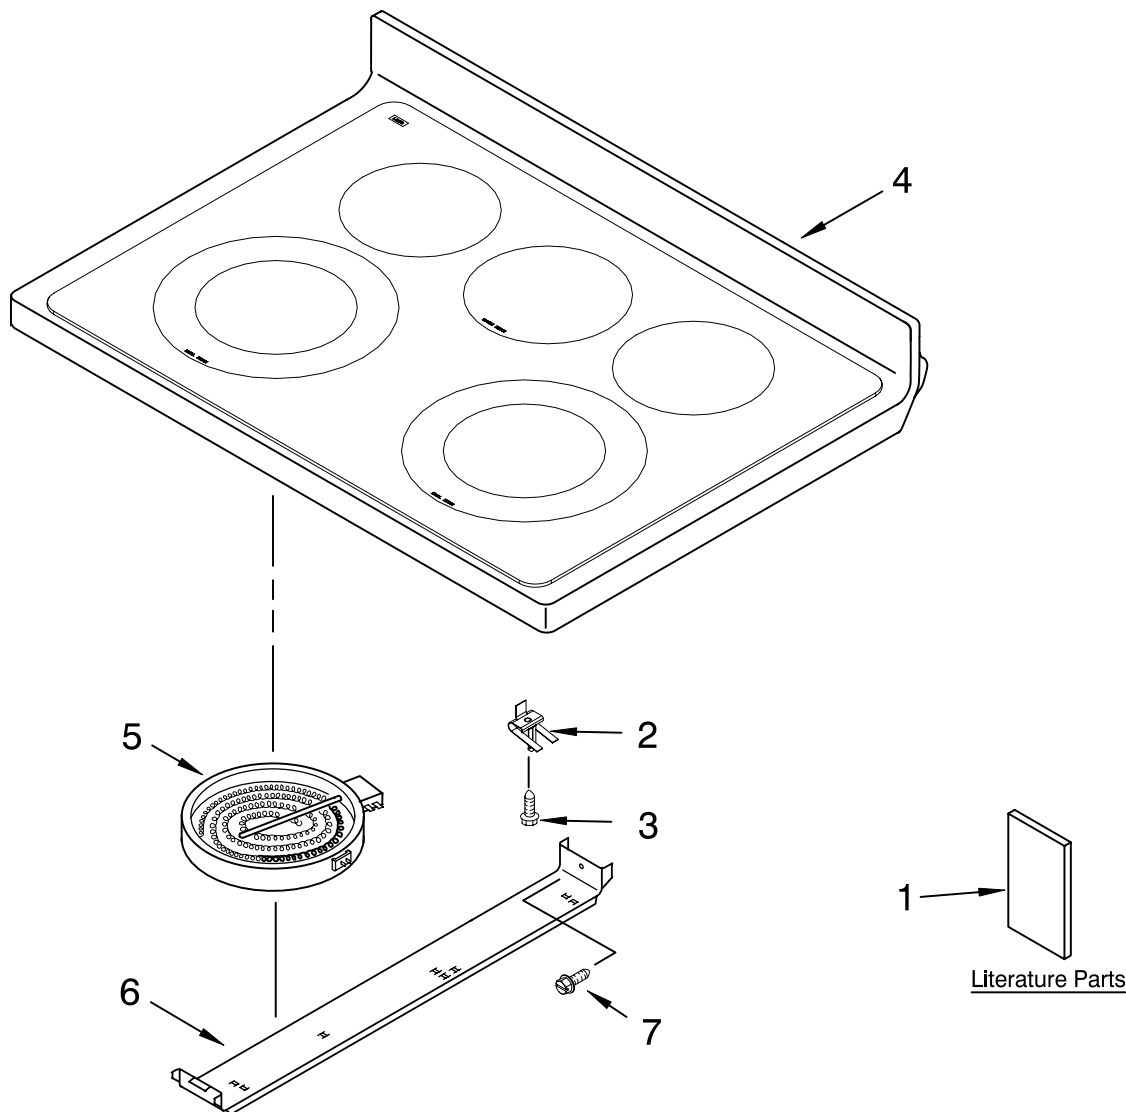

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	W10162204	Owner's Manual
	W10159204	Tech Sheet
	W10141166	Installation Instructions
		Template, Anti-Tip
	9757143	English/French
	9757142	English/Spanish
	9762761	Brochure, Tips Safe Cooking

Illus. No.	Part No.	DESCRIPTION
2	W10035930	Spring, Locator
3	3196170	Screw
4		Cooktop
	W10134943	White
	W10134942	Black


Illus. No.	Part No.	DESCRIPTION
5		Element, Surface
	9759351	2400/1200 W - LF
	8523698	1200 W - LR
	8523698	1200 W - RR
	9759351	2400/1200 W - RF
	9762851	120 V - CR
6		Bracket, Element
	8272791	(2)
	8273720	(1)
7	3196169	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: GR673LXSQ2, GR673LXSS2, GR673LXSB2

(White) (Stainless Steel) (Black)

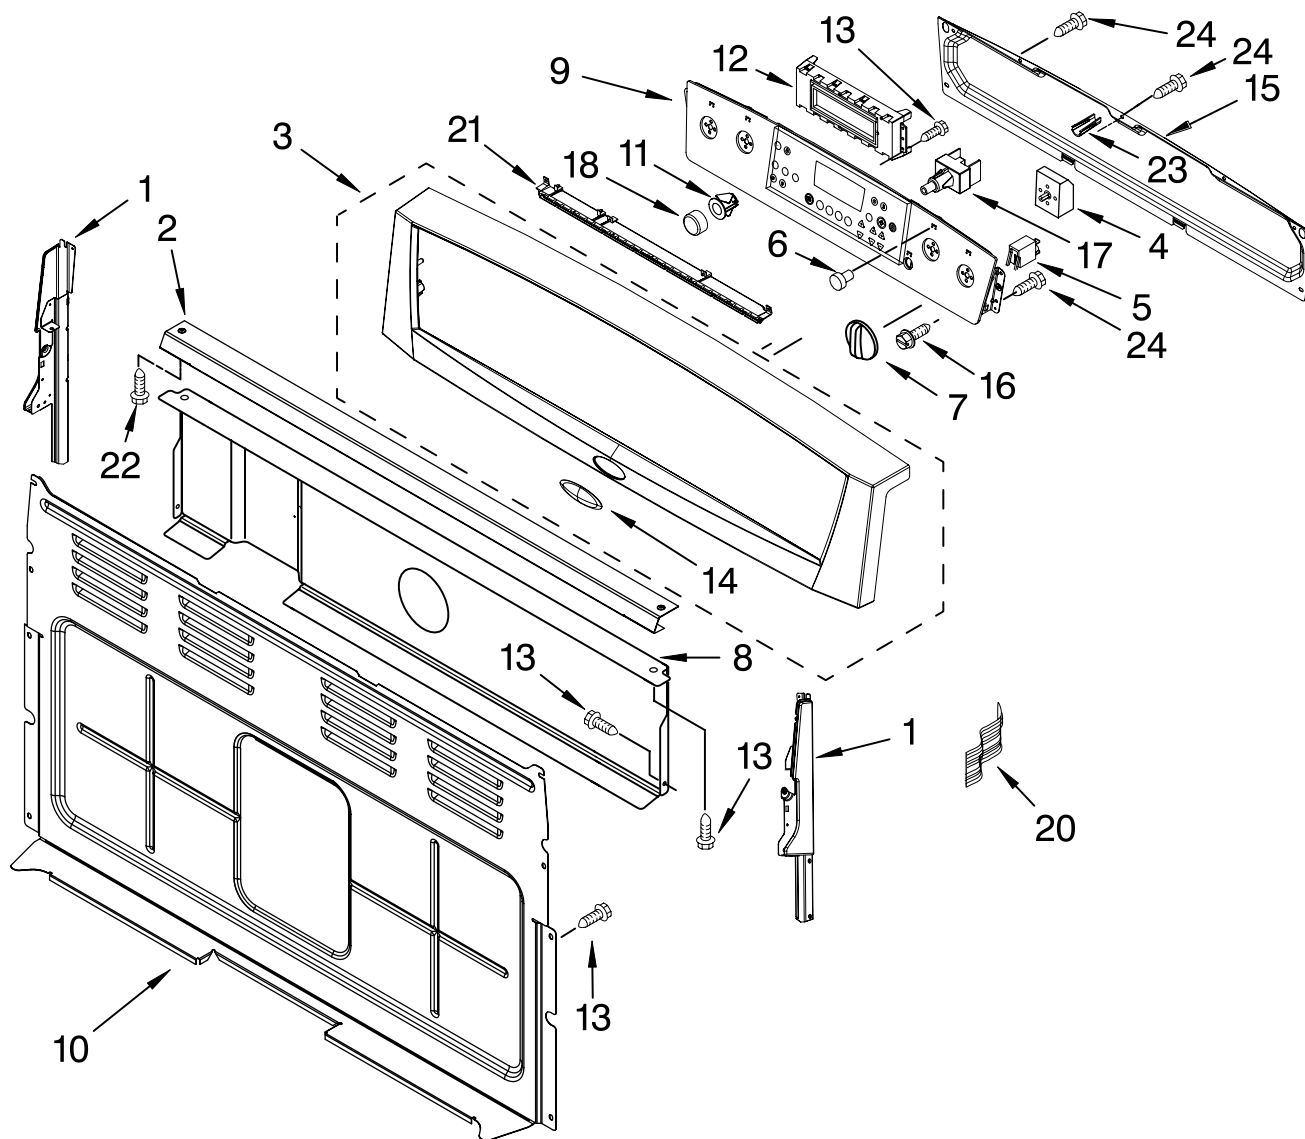

Illus. No.	Part No.	DESCRIPTION
1	W10009040	White Left Hand
	W10009050	White Right Hand
	W10009080	Black Left Hand
	W10009090	Black Right Hand
2	9762095	Bracket, Console
3		Panel, Backguard
	9762585	White
	9762588	Stainless Steel
	9762586	Black
4		Switch, Infinite
	9758060	Left Front (Dual)
	3148951	Left Rear
	3148951	Right Rear
	9758060	Right Front (Dual)


Illus. No.	Part No.	DESCRIPTION
5	8523265	Light, Indicator
6	3196068	Lens, Light
7		Knob, Infinite (4)
	9757132	White
	9758129	Black
8	W10134247	Shield, Heat
9		Glass Switch Membrane
	9763548	White
	9763549	Black
10	9756999	Cover, Rear
11		Bezel, Keep Warm
	9757489	White
	9758489	Black
12	9763042	Control, Range
13	3196178	Screw

Illus. No.	Part No.	DESCRIPTION
14	9757613	Nameplate
15	9756366	Cover, Rear (Console)
16	3400882	Screw
17	8272820	Switch
18		Button
	9757492	White
	9758491	Black
20	W10155290	Control Cable, Flex
21	9757358	Reflector, Light
22		Screw
	3196166	White
	3196168	Black
23	9757490	Support, Glass
24	3196178	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: GR673LXSQ2, GR673LXSS2, GR673LXSB2
(White) (Stainless Steel) (Black)

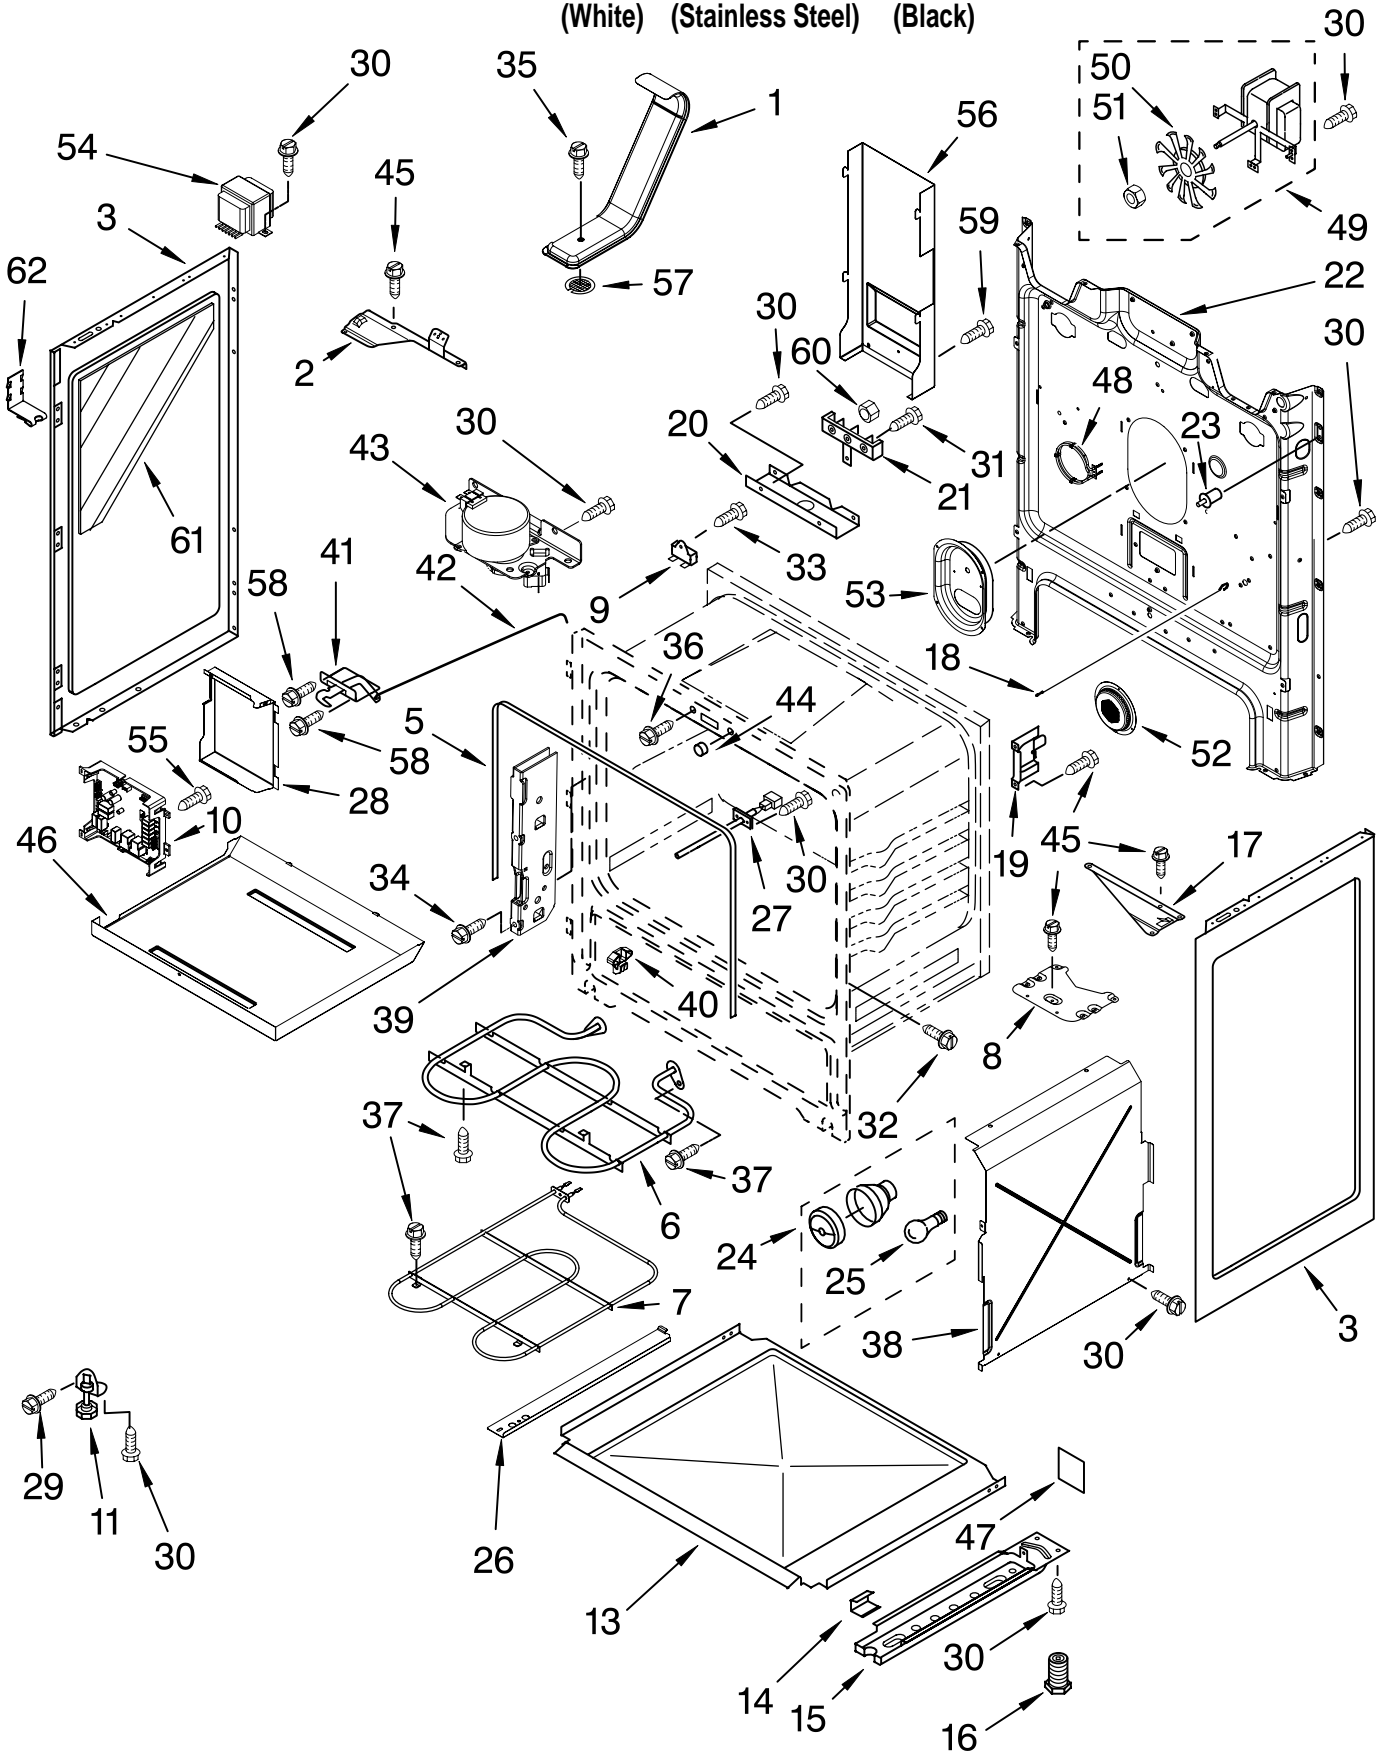

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: GR673LXSQ2, GR673LXSS2, GR673LXSB2

(White) (Stainless Steel) (Black)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	W10127969	Vent Tube Asmbly	27	W10181986	Sensor, Oven	49	W10157259	Fan Motor, Convection
2	8273905	Support, Corner LR	28	9757970	Cover	50	W10116351	Fan Blade
3		Panel, Side (2)	29	3196179	Screw	51	W10116349	Nut
	8053830	White	30	4449809	Screw	52	W10134124	Cover, Fan
	8053832	Black	31	3400016	Screw	53	9755776	Bracket, Fan
5	8522416	Seal, Oven Flange	32	W10067840	Screw	54	9757311	Transformer
6	9757341	Element, Broil	33	3196172	Screw	55	8533930	Screw
7	9755770	Element, Bake (Hidden)	34	W10031780	Screw	56	9757972	Cover, Box
8	3195736	Support, Front (2)	35	3196566	Screw	57	9761301	Screen – Catalyst
9	3196548	Fuse, Thermal	36	3196168	Screw	58	3196560	Screw (2)
10	9761909	Appliance Manager	37	3196174	Screw	59	3196178	Screw
11	3196037	Foot, Front (2)	38	9758238	Retainer, Side (2)	60	112432	Nut (3)
13	8054068	Tray, Insulation	39	9760407	Brkt – Mounting	61	9761490	Insulation
14	3196576	Clip, Panel (6)	40	W10114344	Glide, Drawer	62	9761512	Clip, Mounting
15	9760314	Rail, Base (2)	41	9761013	Latch, Door			
16	W10058460	Foot, Rear (2)	42	W10078380	Rod, Latch			
17	3195987	Guard, Wire	43	W10107820	Latch Asy, Rear			
18	9757239	Rod – Dr Switch	44	9758701	Spacer, Door			
19	3186116	Support, Oven (2)	45	3196169	Screw			
20	3186034	Bracket, Service	46	9755769	Tray, Hidden Bake Element			
21	9761958	Block, Terminal	47	9759689	Card, Insulator			
22	9757029	Back, Main	48	9758525	Element, Convection			
23	9757262	Switch, Door						
24	3196701	Light Socket Assy						
25	311255	Bulb, Oven Light						
26	9755771	Cover, Tray						

INSULATION


8272616	Insulation, Wrap
9755772	Insulation, Back
8272613	Insulation, Vent

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DRAWER & BROILER PARTS

For Models: GR673LXSQ2, GR673LXSS2, GR673LXSB2

(White) (Stainless Steel) (Black)

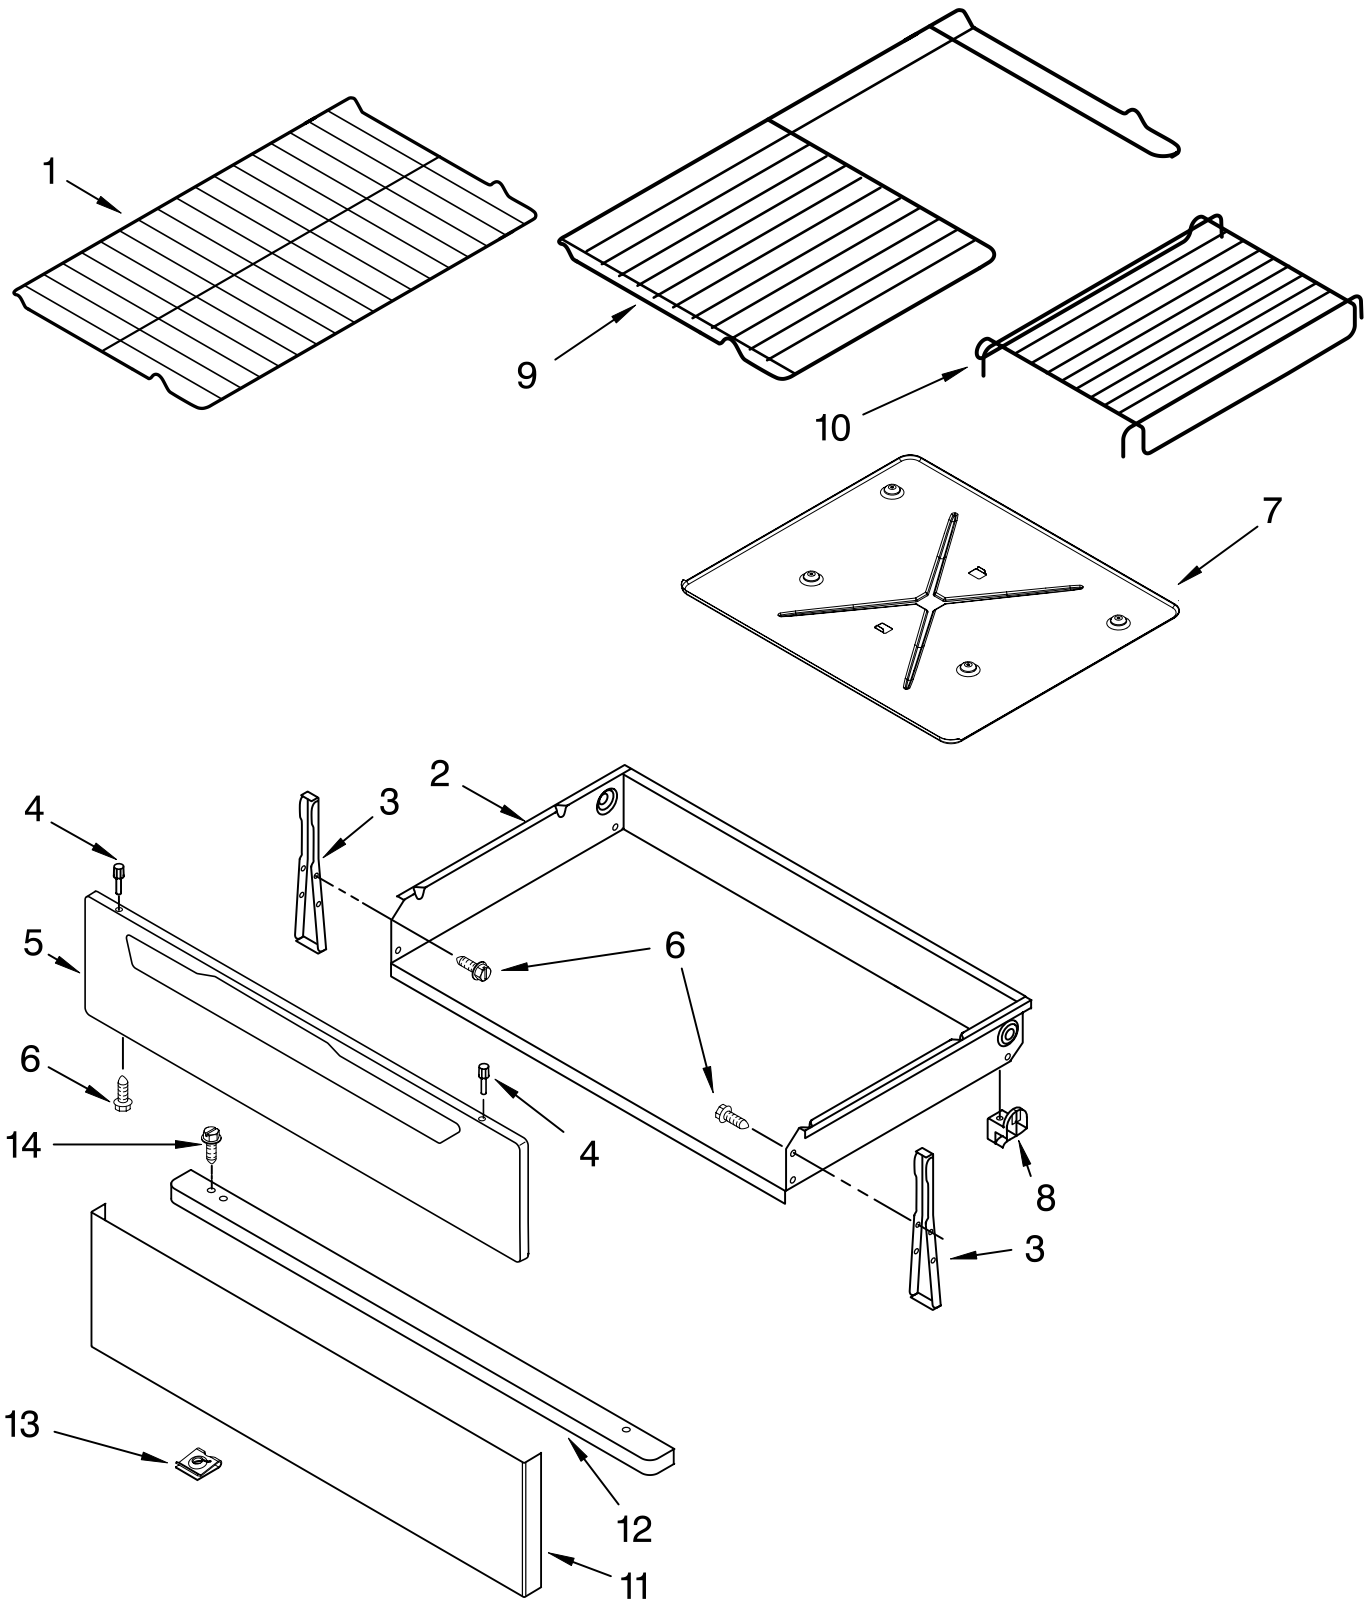

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DRAWER & BROILER PARTS

For Models: GR673LXSQ2, GR673LXSS2, GR673LXSB2


(White) (Stainless Steel) (Black)

Illus. No.	Part No.	DESCRIPTION
1	W10138079	Rack, Oven (2)
2	9761030	Drawer, Storage
3	9758200	Brkt-Mntg, Drawer
4		Rivet, Push (2)
	3196814	White
5		Panel, Drawer Frnt
	8053339	White
	8053341	Black
6	3196168	Screw
7	9756711	Heat Shield,Drwr
8	8053334	Glide, Drawer (2)
9	8274021	Rack, Partial
10	8274022	Rack, Insert
11	9755798	Panel (Stls.Model)
12	9762251	Handle(Stls.Model)
13	9781235	Clip(Stls.Model)
14	W10031790	Screw(Stls.Model)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: GR673LXSQ2, GR673LXSS2, GR673LXSB2
(White) (Stainless Steel) (Black)

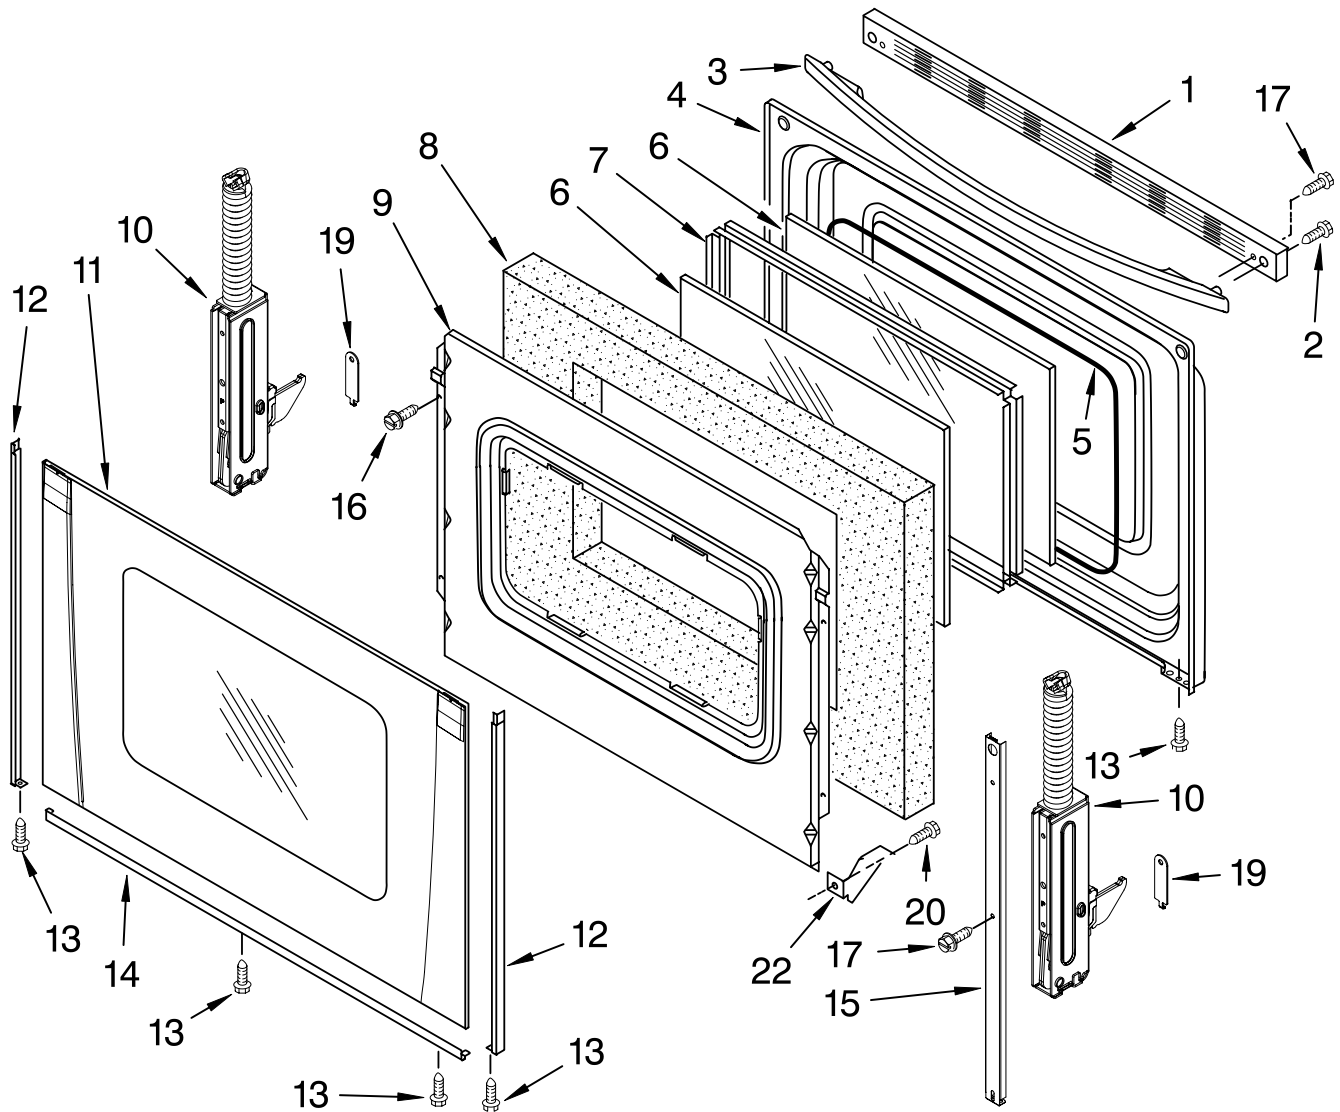

Illus. No.	Part No.	DESCRIPTION
1	9761975	Trim, Top
	9761977	White
	9762391	Stainless Model
	9762391	Black
2	3196164	Screw
3	9761978	Handle, Door
	9761979	White
	9761981	Black
	9761981	Stainless Steel
4	9761344	Liner, Door
5	8522414	Seal, Window
6	9758162	Glass, Inner (2)
7	3186289	Frame, Glass

Illus. No.	Part No.	DESCRIPTION
8	8272618	Insulation, Door
9	9761357	Retainer, Insul.
10	9761496	Hinge, Door (2)
11	W10010660	White
	W10010680	Black
	W10010690	Stainless Steel
12	8523166	Trim, Side
	8523172	White Left Hand
	8523171	White Right Hand
	8523171	Black Left Hand
	8523165	Black Right Hand
	9762249	Unvrs'l Slvr LH
	9762250	Unvrs'l Slvr RH

Illus. No.	Part No.	DESCRIPTION
13	3196160	Screw
14	8523175	Trim, Lower
	8523177	White
	8523177	Black
15	W10113759	Strap, Door
16	W10031790	Screw
17	W10031780	Screw
19	9761517	Clip, Dr Mntg (2)
20	3196165	Screw
22	3196794	Bracket, Window(2)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS (NOT INCLUDED)

For Models: GR673LXSQ2, GR673LXSS2, GR673LXSB2

(White) (Stainless Steel) (Black)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

Following Parts Not Illustrated

SPLICING WIRES---25FT.

LENGTH

242828	Wire, Black	12 Ga. 150° c
242821	Wire, Blue	14 Ga. 150°c
242822	Wire, Brown	14 Ga. 150°c
242830	Wire, Brown	14 Ga. 200°c
242823	Wire, Green	14 Ga. 150°c
242824	Wire, Orange	14 Ga. 150°c
242825	Wire, Red	14 Ga. 150°c
242831	Wire, Red	14 Ga. 200°c
242827	Wire, Yellow	14 Ga. 150°c

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch-Up Self-Clean(1/2 Pt)
261582	Grease

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

INSULATION

261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
240132	Insulation, Fiberglass (2-1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2oz.)

72017	White
4392899	Biscuit
511873	White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
4392901	Biscuit
285006	Superior Black
206922	Primer (White)

PAINT, BULK (1 qt.)

799344	White (Uncut)
4392900	Biscuit (Uncut)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

ACCESSORY PARTS

241430	Foil, Aluminum Oven (18" x 25')
3184478	Cleaner, Glass

ANTI-TIP KIT

W10017440	Anti-Tip Kit
-----------	--------------

WIRING HARNESS PARTS

Following Parts Not Illustrated

W10111781	Harness, Wire (Cooktop Left)
W10111780	Harness, Wire (Cooktop Right)
W10111778	Harns-Wire, Warm
9758438	Harness, Wire (Main)
9758193	Harness, Wire (Console)
9756550	Harness, Bake Element (Hidden)
313660	Clip, Ground Wire
3196154	Screw